



HoopMaster™



Station Extender Instructions

The Station Extender attaches to the top of the Standard 16" HoopMaster Station, expanding the width to 22" to accommodate XL and larger garments.

Step 1. Insert the two nylon pins through the top holes of the Extender as seen in Figure 1. A tight fit is normal.

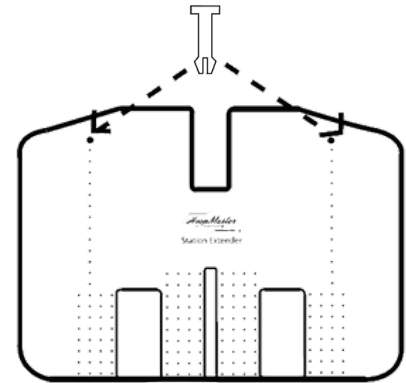


Figure 1

Step 2. Align the Extender with the Station top and press the pins through the larger Station holes. The Extender is now mounted. See Figure 2.



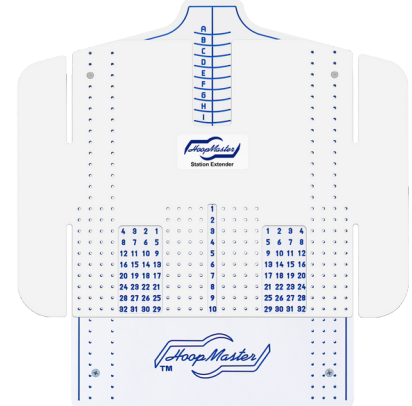


Figure 2

Removing the Extender: Pull up on the top of the Extender to remove. The nylon pins should stay in the Extender when not in use. Two extra pins are included in case one is lost.

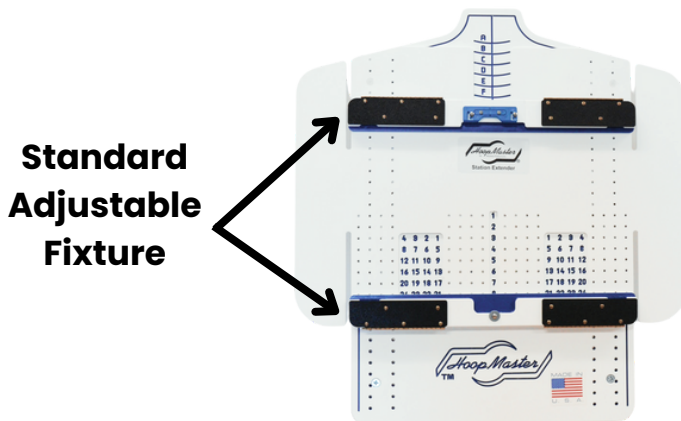

Standard
Adjustable
Fixture

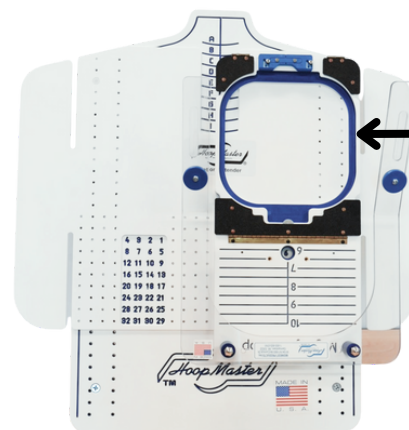

5.5" Mighty
Hoop Fixture

Note: The HoopMaster Station Extender is compatible with ALL Fixtures including the Adjustable Fixture.

***Contact Us:** If your Station does not have the larger holes needed to mount the Extender.



Join Our Socials
Scan the QR Code
or visit hoopmaster.com/links

30 Day Money Back Guarantee
3 Year Limited Warranty
Midwest Products, Inc.
(262) 257- 0930 - hoopmaster.com

Made in the USA



Extender (8/27/25)