

HoopMaster Home Edition Instructions for Brother Innov-is, ULT, and PC-8500 machines



Includes:

- One multi size station mounted on metal base with rubber feet
- Innov-is hoop holding bracket
- 2 small backing holder blocks

Optional Items:



PC-8500 hoop bracket




ULT hoop Bracket

If you are missing any pieces please call 1-800-900-0741.


Midwest Products, Inc.

W194 N11665 McCormick Dr. • Germantown, WI 53022
Phone (262) 257-0930 or 1-800-900-0741 • Fax (262) 257-0934
www.HoopMaster.com


Left or Right Chest Hooping

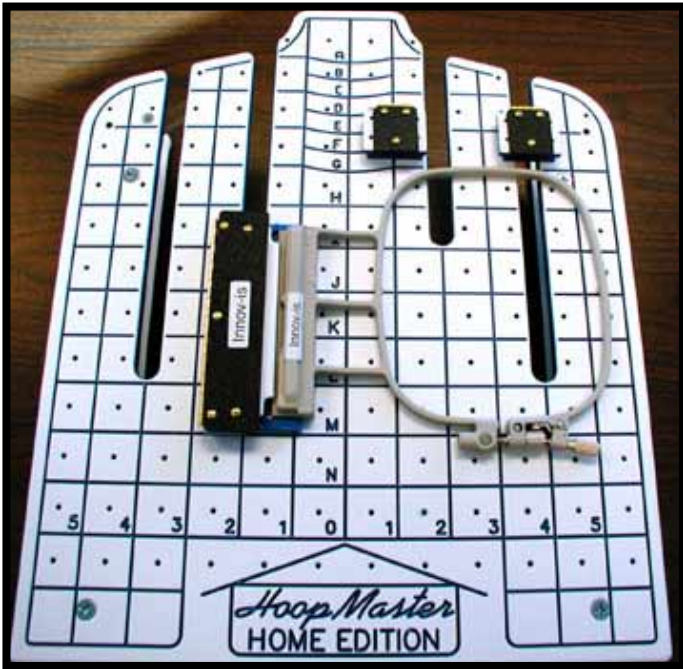

This is an example of how to use your 5 x 6 inch hoop for a left chest design placement. Start by placing the adult station on the table in front of you. Then place the hoop holding bracket on the station top. If you open the black magnetic flap on the hoop holding bracket, there are site holes to help you place the bracket on the station. Use the two small backing holder blocks above your hoop for holding your backing material. Centering your hoop over the intersection of the J and 3 lines is a good starting point for most left or right chest design placement. This placement is only a starting point. We suggest that you mark your first garment to see if this is a good location for your design.

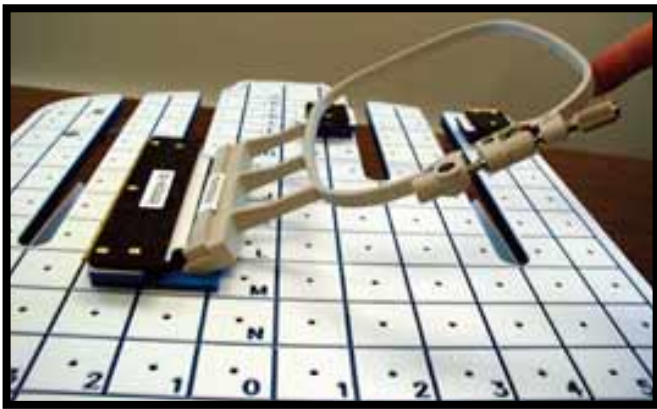

To place your hoop in the bracket. The PC-8500 hoops slide straight down on the bracket just like loading them on your machine. The Innov-is and ULT type of hoop should be placed in the bracket on an angle and lowered into place. Do not force the hoop down. If it does not fall easily in place then the hoop is not aligned with the bracket correctly.

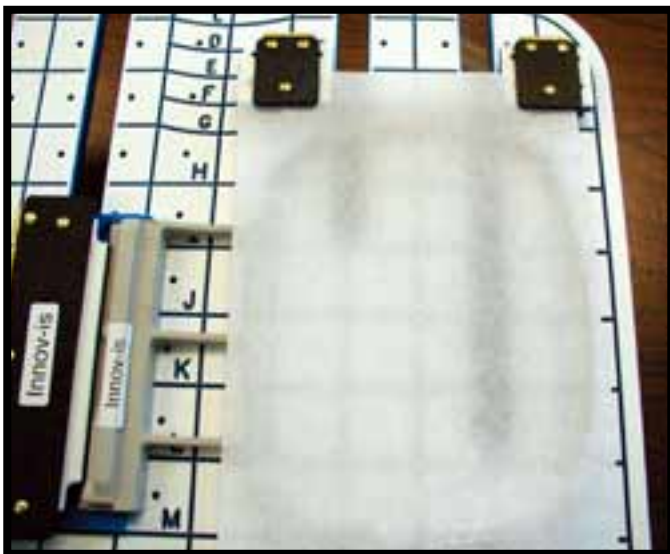


Next open the black magnetic flaps and place your backing material over your hoop. Then close the magnetic flaps to secure your backing in place while you are hooping.

Midwest Products, Inc.

W194 N11665 McCormick Dr. • Germantown, WI 53022
Phone (262) 257-0930 or 1-800-900-0741 • Fax (262) 257-0934



Now pull your shirt over the station. Pull the shirt all the way onto the station so that the seems at the top are even on both sides of the shoulder form. This will help to get the shirt straight. Then align the inner ring with the hoop inside the shirt. If your logo location mark on your garment is not in the middle of the hoop, then adjust your bracket location or the placement of your garment on the station. When your garment and logo location is in the correct place, you can make a note of the letter line and number line that your hoop is centered over.

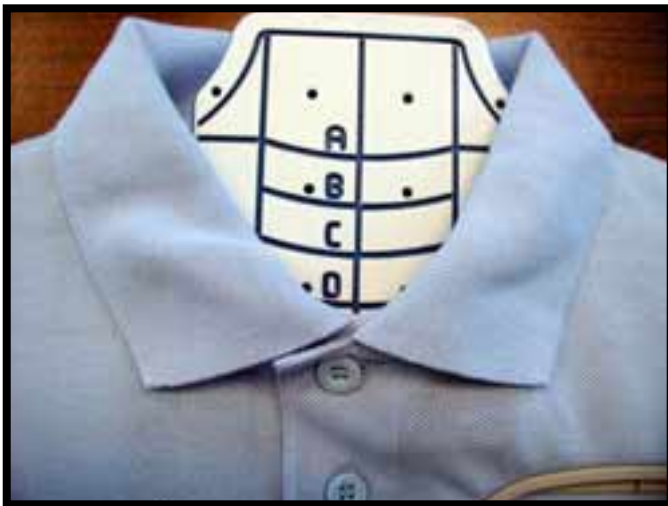

Also look at the letter that the collar of the shirt is pulled down to. Make sure you pull each garment down to this same letter. This sets the height of the design in the hoop. If you are doing more then one garment of the same style and size, you should not have to mark the rest of them. If you change size or style of garment, you will want to mark the new garment and check the placement to make sure it is still ok.

When removing the shirt from the station be sure to lift the hoop straight up if using the PC-8500 type hoop, or lift the front of the hoop first for the Innov-is and ULT type hoop.



For smaller items, simply use the slots in the main station top to pull the smaller garments onto the hooping board.

The procedures to use your larger and smaller hoops are basically the same. Just find the place you would like the design and place the bracket on the station top.

**If you have any questions please call 1-800-900-0741.
Thank you for purchasing the HoopMaster Home Edition.**

Midwest Products, Inc.

W194 N11665 McCormick Dr. • Germantown, WI 53022
Phone (262) 257-0930 or 1-800-900-0741 • Fax (262) 257-0934
www.HoopMaster.com